




Remove all items from the carton. Verify all pieces before assembly. Please contact OM Seating if the model received doesn't appear to fit these instructions.

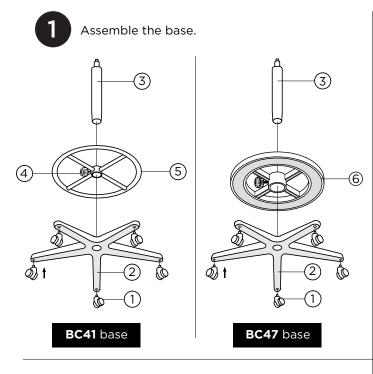

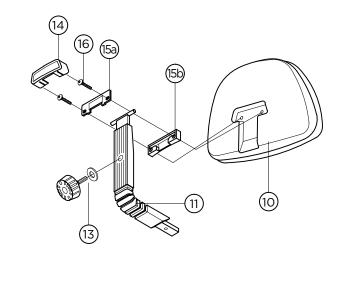




Attach the mechanism to the bottom of the seat and the backrest to the mechanism.

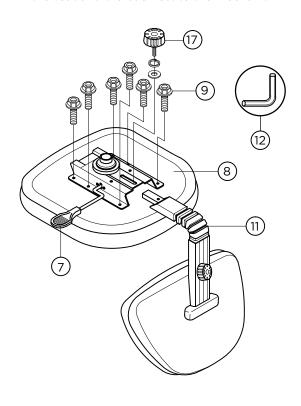

Lower the chair top snuggly onto the top end of the cylinder. (Remove the cap first) Activate the cylinder to its lowest point. Sit fully into the seat and adjust the seat to the desired height.

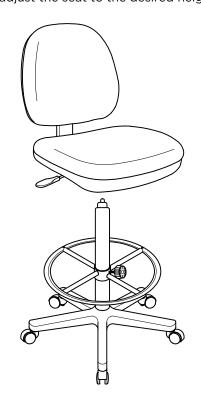



Parts List MODEL # BC41 & BC47



1. Caster (5)



 
2. Base



3. Cylinder




4. Footring Height Adjustment Knob



5. Footring (BC41)



 6. Footring (BC47)



7. Seat Plate



 
8. Seat



9. Seat Plate Screws (6)



10. Backrest



11. Backrest Post + Plastic Cover



12. M5 Size Allen Wrench



13. Backrest Height Adj. Knob + Washer



14. Backrest Plastic Cover



 
15a. Backrest Metal Cover



15b. Backrest Plastic Plate



16. Backrest Screw (2)



17. Backrest Depth Adj. Knob + Flat & Lock Washers

PREVENTIVE MAINTENANCE AND WARNING!

- Use this product only for seating one person at a time.
- \bullet Do not use this chair as a step stool / ladder.
- Do not sit on any part of the chair except the seat.
- Do not use chair on uneven floor surfaces.
- Do not use chair unless all bolts, screws and knobs are tightened.
- Every six months, please make sure all bolts, screws and knobs are fully tightened to ensure stability.
- If any parts are missing, broken, damaged or worn, stop use of the product until repairs are made using factory authorized parts.
- Dispose of packaging properly. Plastic bag is not a toy. Do not use plastic bag as head covering - it may cause suffocation
- Failure to follow these warnings could result in serious injury.
- Note: some screws may be pre-assembled. If pre-assembled, ignore assembly instructions.